 
 


# ISOLATOR-SPARE PARTS

## 420kV- Centre Break & Double Break

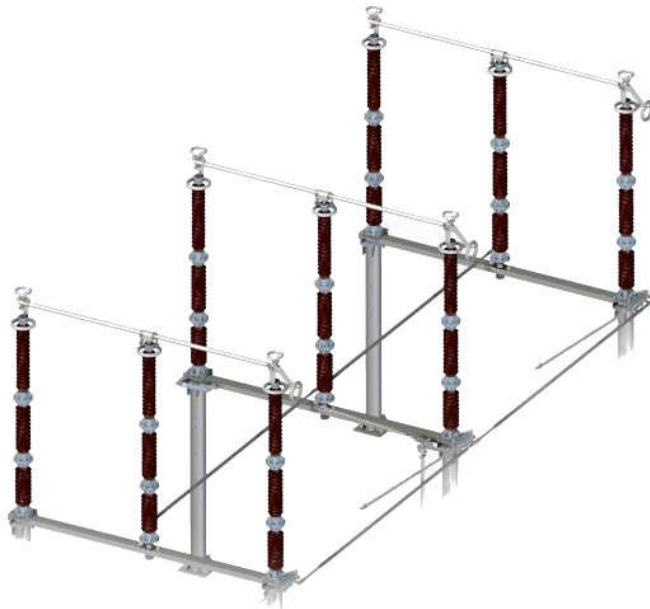

420kV  
(1600 -3150)A W.O.E (Without Earth Switch)  
W.S.E (With Single Earth Switch)  
W.D.E (With Double Earth Switch)

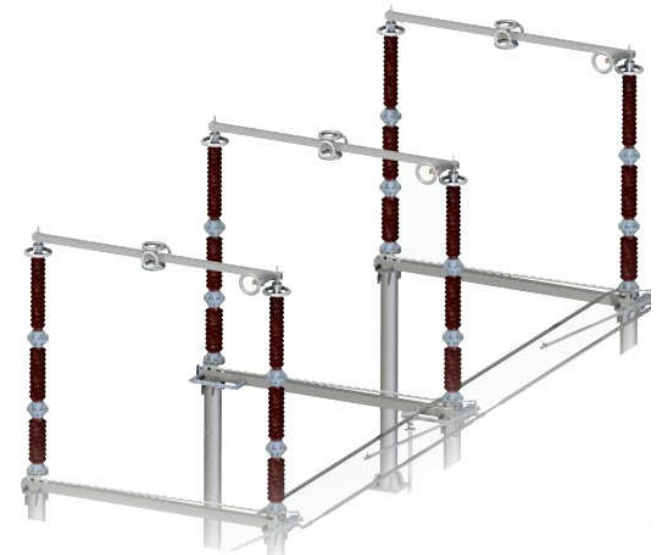

**WE ARE THE LEADING MANUFACTURER OF HIGH VOLTAGE DISCONNECTING SWITCHES FROM 11kV –550kV LEVEL. CENTRE OF EXCELLENCE FOR DESIGN AND MANUFACTURE OF CENTRE BREAK , DOUBLE BREAK AND PANTOGRAPH DISCONNECTORS**

Spares Catalog

 
# S&S Isolator

SI No	Description	UoM	Qty/Pole
<b>A</b>	<b>Current Carrying Parts For 420kV Isolator Type RC 420, 2000A</b>	No	1
1	Complete Male Arm Assembly with contacts		
2	Complete Female Arm Assembly with Contacts	No.	1
3	Male Contact with Accessories	No.	1
4	Female Contact with Accessories	No.	8
5	Current Transfer Assembly Finger Design	No.	6
6	Current Transfer Assembly Flexible Design	No.	1



# S&S Isolator

Sl No	Description	UoM	Qty/Pole
<b>B</b>	<b>Current Carrying Parts For 420kV Isolator Type RD 420, 1600A</b>		
1	Moving Blade Assembly	No.	1
2	Cu Extrusions of a moving Blade	No.	4
3	Fixed Contact Assembly	No.	2
4	Fixed Contact Fingers with Accessories	No.	16
<b>C</b>	<b>Current Carrying Parts For 420kV Isolator Type RD 420, 2000A</b>	No.	1
1	Moving Blade Assembly		
2	Cu Extrusions of a moving Blade	No.	4
3	Fixed Contact Assembly	No.	2
4	Fixed Contact Fingers with Accessories	No.	16
<b>D</b>	<b>Current Carrying Parts For 420kV Isolator Type RD 420, 3150A</b>	No.	1
1	Moving Blade Assembly		
2	Cu Extrusions of a moving Blade	No.	4
3	Fixed Contact Assembly	No.	2
4	Fixed Contact Fingers with Accessories	No.	16
<b>J</b>	<b>Earth Switch Parts Common for 420kV Isolator Type RC420&amp;RD420</b>		
1	Earth Fixed Contact Assembly Finger	No.	1
2	Earth Fixed Contact Assembly Stem	No.	1
3	Earth Moving Contact ( Extrusion)	No.	2
4	Earth Moving Contact & Accessories	No.	1
5	Earth flexible Tin Plated	No.	24
6	Corona Ring	No.	1

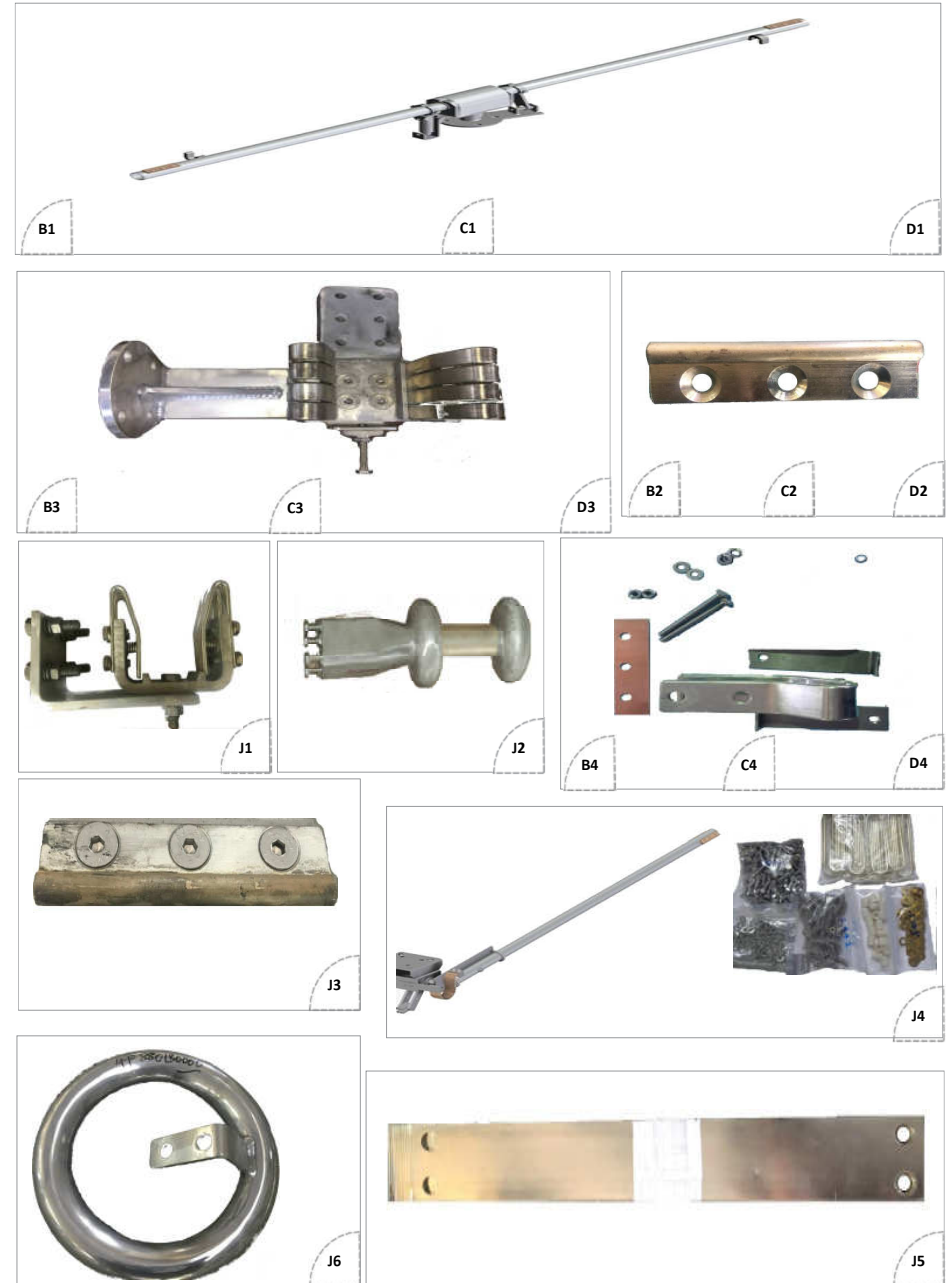

# S&S Isolator

Sl No	Description	UoM	Qty/Pole
<b>K</b>	<b>Other Common Parts for 420 kV Isolator Type RC420 &amp; RD420</b>		
1	Insulator Corona Ring(RC & RD)	No.	2 & 3
2	Corona Ring	No.	4
3	Bearing (Base Channel)	No.	2
4	Down Operating Pipe with flange	No.	1
5	Universal Coupling	No.	2
6	Tandem Pipes	No.	2
7	Inter-post Pipes	No.	1
8	Torque Bearing Assembly For Main Switch	No.	1
9	Torque Bearing Assembly For Earth Switch	No.	1



K1



K2



K3



K4



K5



K6&K7



K8&K9